


GRASS BOTTOM-LIP MOUNT DRAWER SLIDE INSTALLATION

1. Take CABINET MEMBER and bend back of slide at 90 degree angle as shown. Insert nylon tabs that are on the end of the drawer slide into the pre-drilled holes in the cabinet BACK.
2. Attach the bottom lip mount drawer slide to the DRAWER SIDES. The drawer is now ready for operation.

NOTES:

1. The drawer slides should be mounted after the DRAWER BOX is assembled.
2. Pull drawer member (roller end) out 1/2" past end of box for the following cabinets:
 - planning desk
 - top drawer of the planning desk

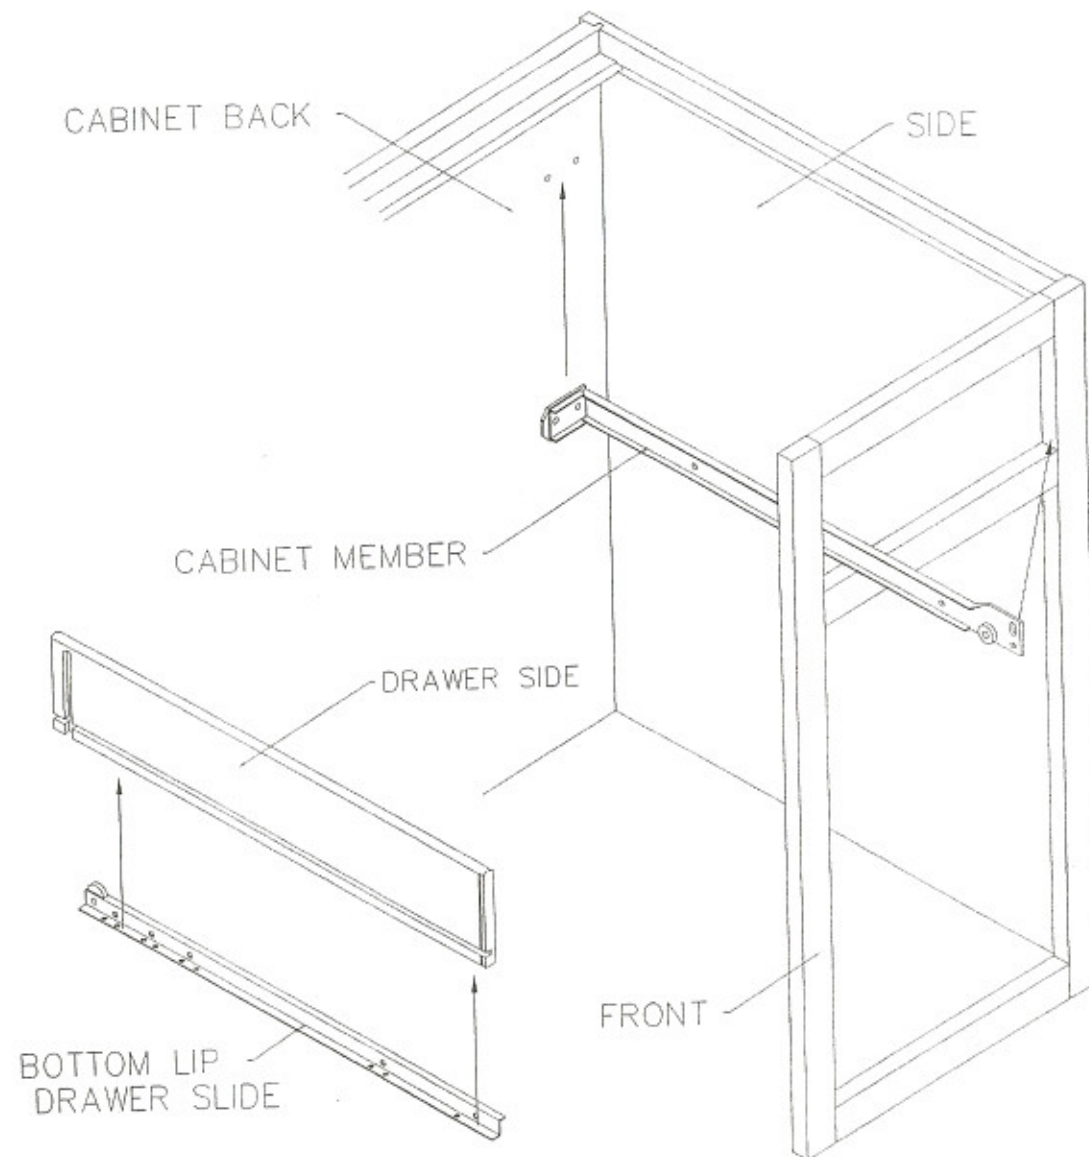

UNDERMOUNT DRAWER SLIDE INSTALLATION

CABINET ASSEMBLY

1. Mount REAR BOOT on end of CABINET MEMBER. Insert tabs on the back of the REAR BOOT into the pre-drilled holes in the CABINET BACK.

2. Fasten the CABINET MEMBER to the FRONT FRAME using the screws provided.

NOTE: For cabinets with non-overlay drawer fronts, install a 3/4" thick block behind FRONT FRAME and mount CABINET MEMBER to block.



3. Secure REAR BOOT to CABINET BACK using the screws provided.

DRAWER ASSEMBLY

1. The DRAWER MEMBERS should be mounted after the DRAWER BOX is assembled.

NOTE: Back of DRAWER BOX must be notched before attaching DRAWER MEMBER.




2. Place the DRAWER MEMBER onto the bottom of the box and press TEETH firmly into bottom groove. The front of the DRAWER MEMBER should be flush with the front of the DRAWER BOX. Fasten the slide to the DRAWER BOX using 2 screws as shown.

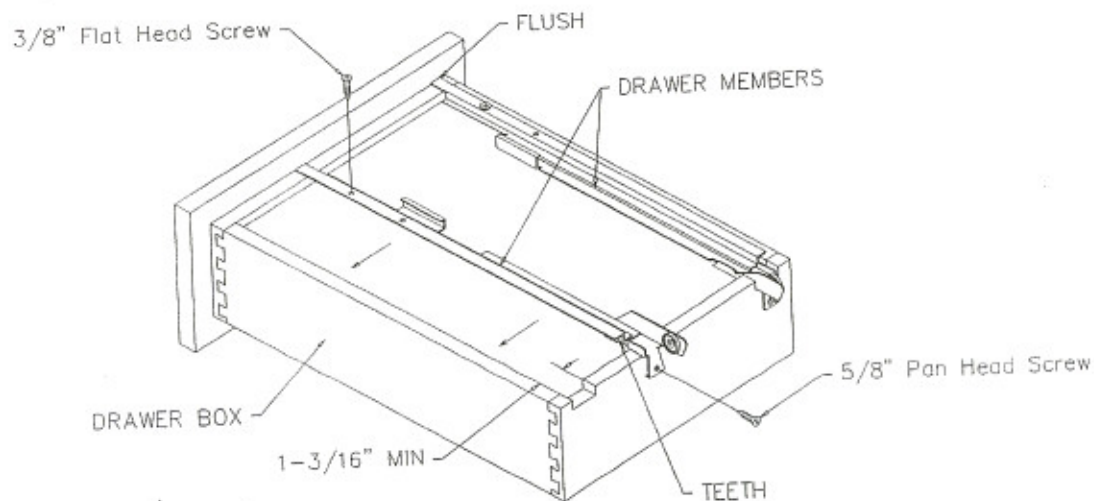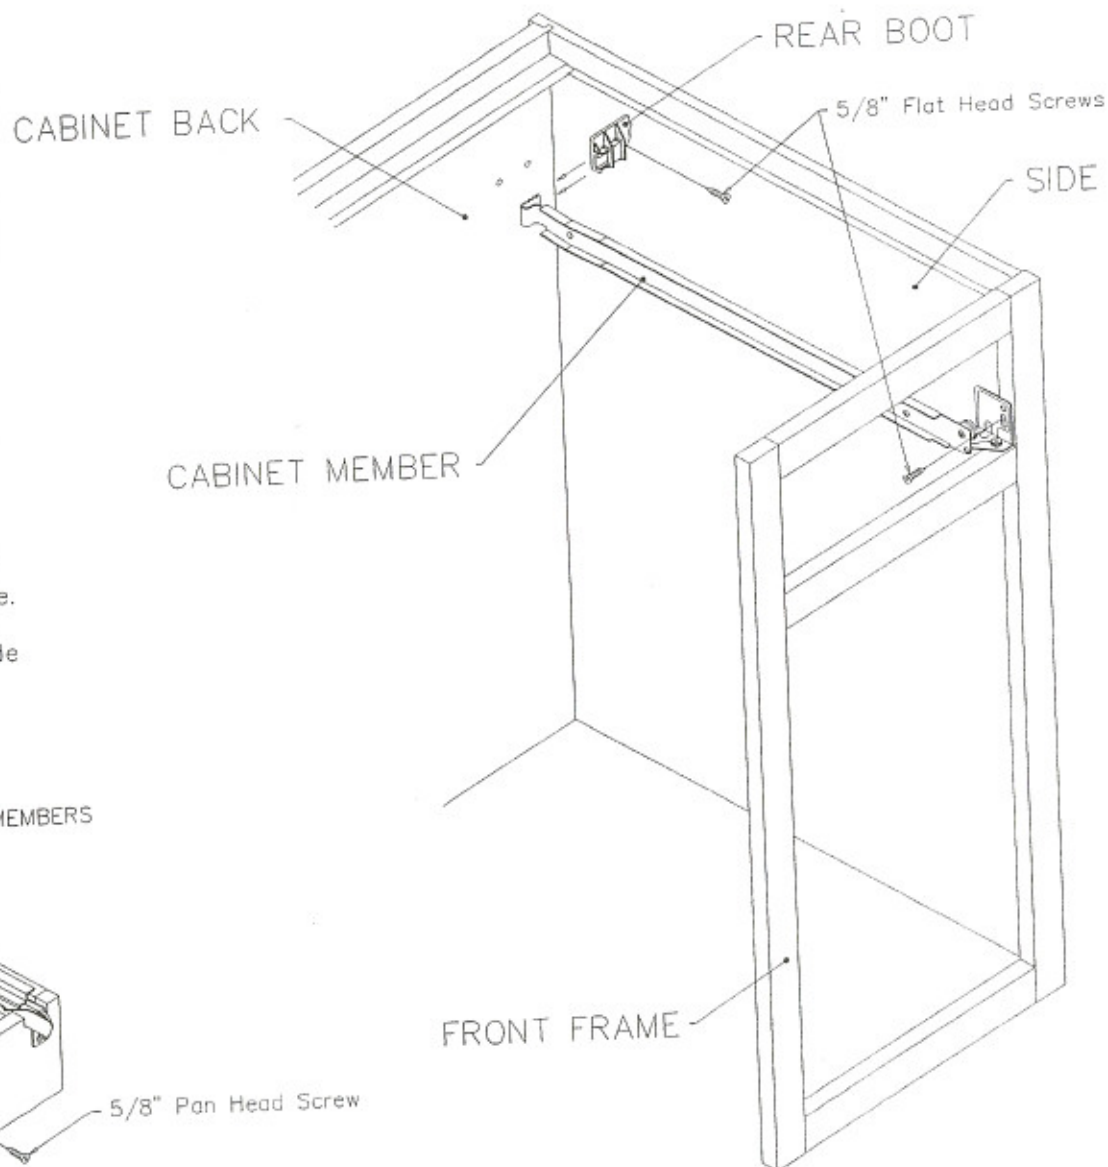

DYNASLIDE INSTALLATION for WALL CABINETS

DRAWER BOX ASSEMBLY

1. Drill $1/16$ " Dia pilot holes to accept DRAWER RUNNER as shown. **NOTE:** These dimensions are for overlay drawer fronts only. Move holes closer to front for drawer fronts with rabbeted lip or inset fronts. Move holes front equal to the size of the offset.
2. Remove the DRAWER MEMBER from the slide assembly by depressing the black lever.
3. Fasten the DRAWER MEMBER to the DRAWER BOX using the $1/2$ " round head screws provided.

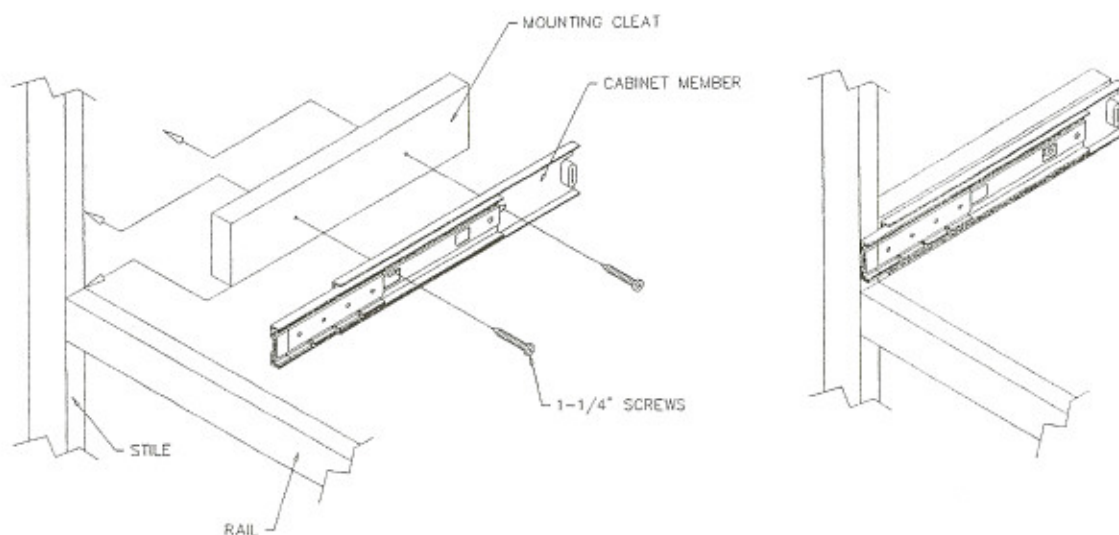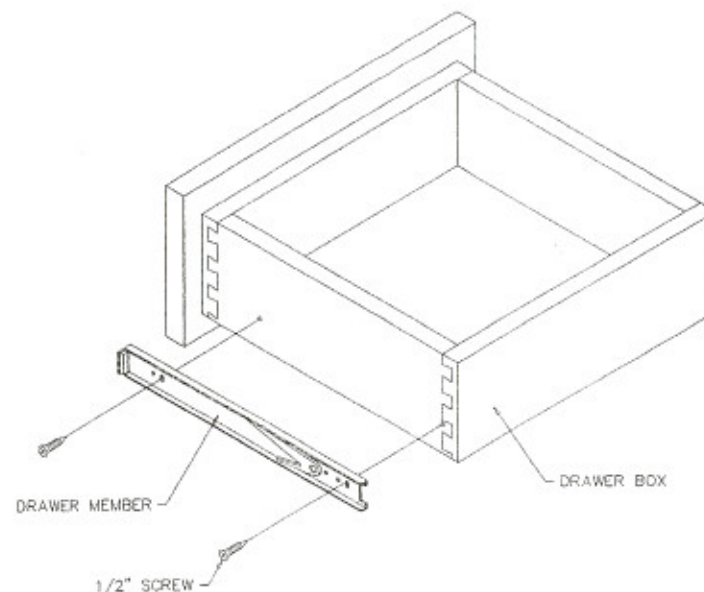
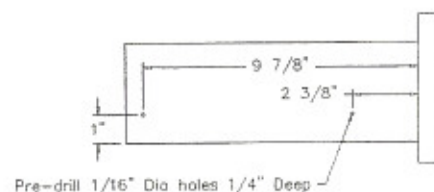


CABINET ASSEMBLY

1. Place MOUNTING CLEAT inside cabinet. The bottom edge of the MOUNTING CLEAT should be positioned flush with the top edge of the front frame RAIL and tight against the front frame STILE.
2. Using a $1/16$ " drill bit, pre-drill two holes into the cabinet side using the MOUNTING CLEAT as a guide.
3. Mount the CABINET MEMBER and MOUNTING CLEAT to the cabinet side using the $1-1/4$ " round head screws provided.



DESK DRAWER SLIDE INSTALLATION

1. Mount DRAWER CLEAT to SIDE with the front edge tight against the FRONT FRAME. Mount CABINET MEMBER to DRAWER CLEAT.
2. Attach DRAWER MEMBER to DRAWER BOX.

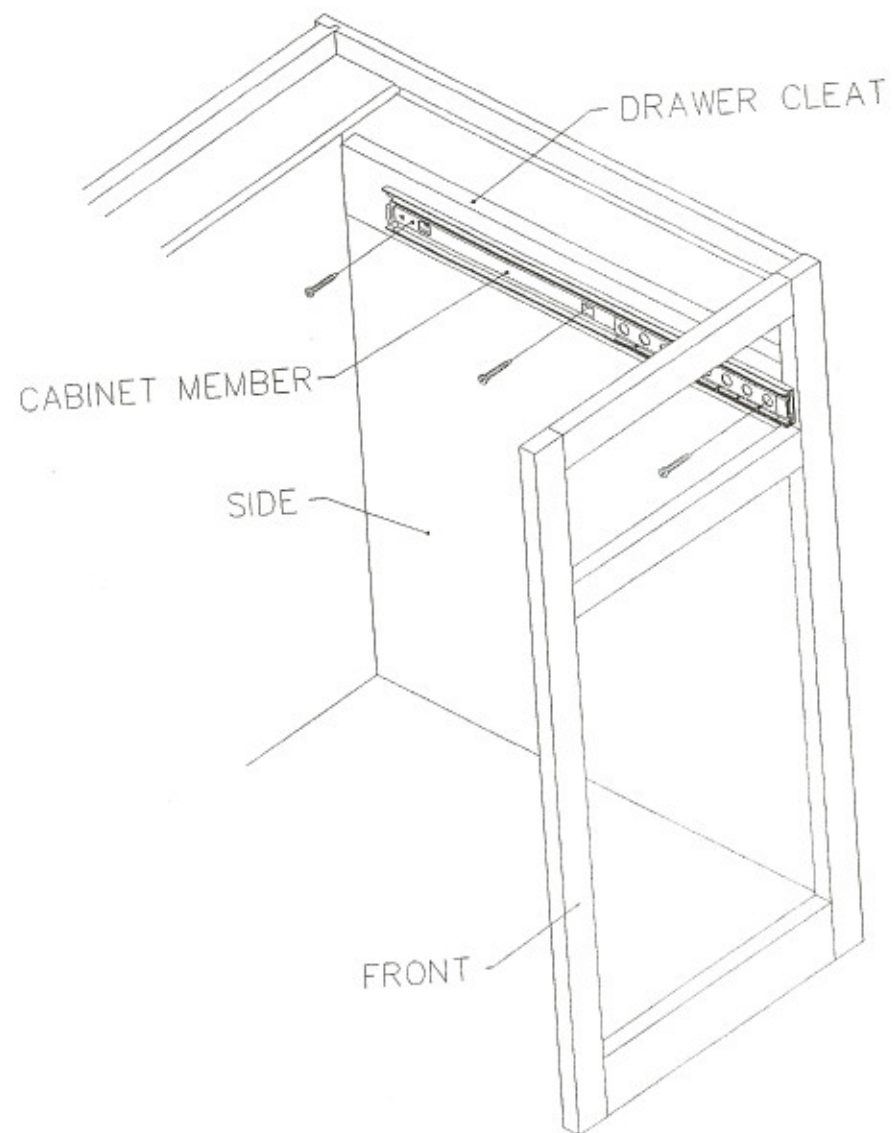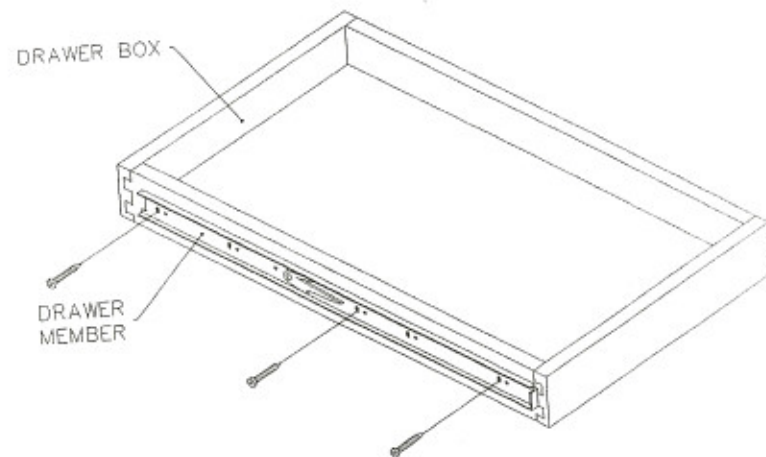


DESK BASE 2 & 3 DRAWER SLIDE INSTALLATION

1. Mount DRAWER CLEAT to SIDE so that DRAWER MEMBER can be attached with screws. It is recommended that the DRAWER CLEAT be glued to the cabinet SIDE. Mount CABINET MEMBER to DRAWER CLEAT.
2. Attach DRAWER MEMBER to DRAWER BOX.

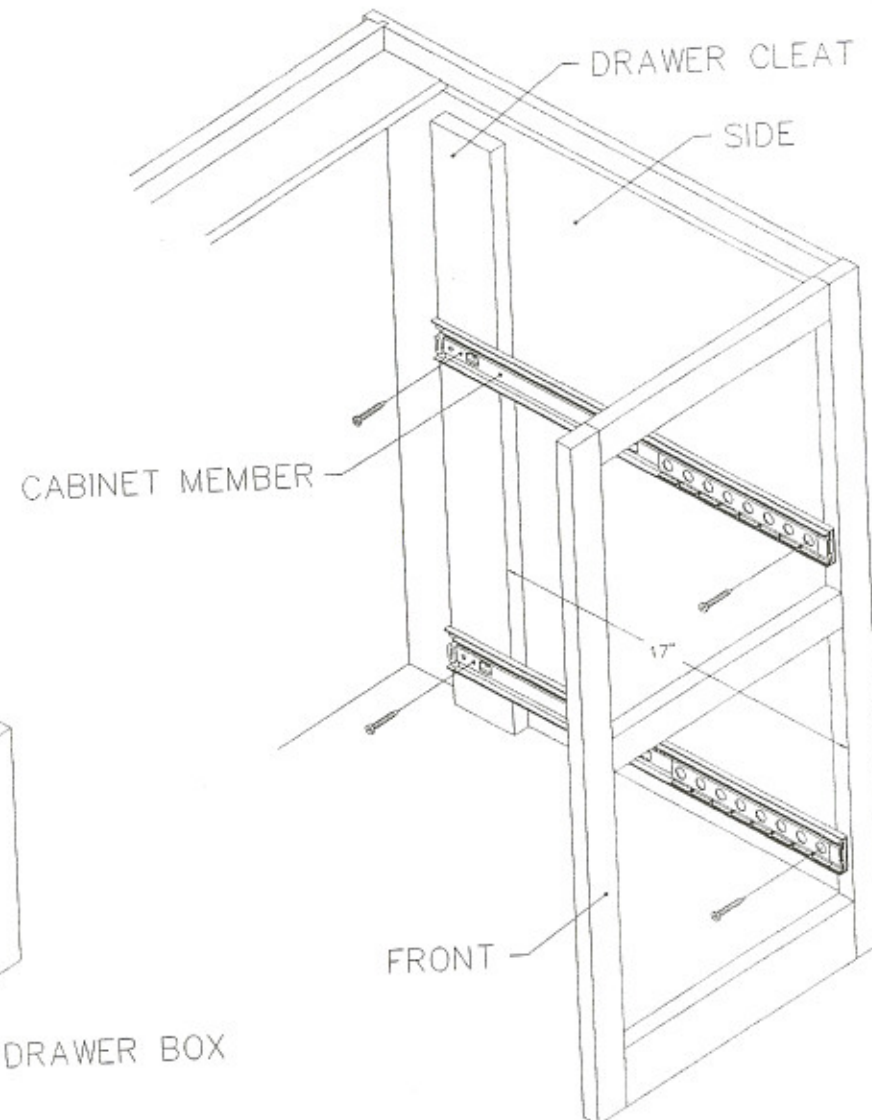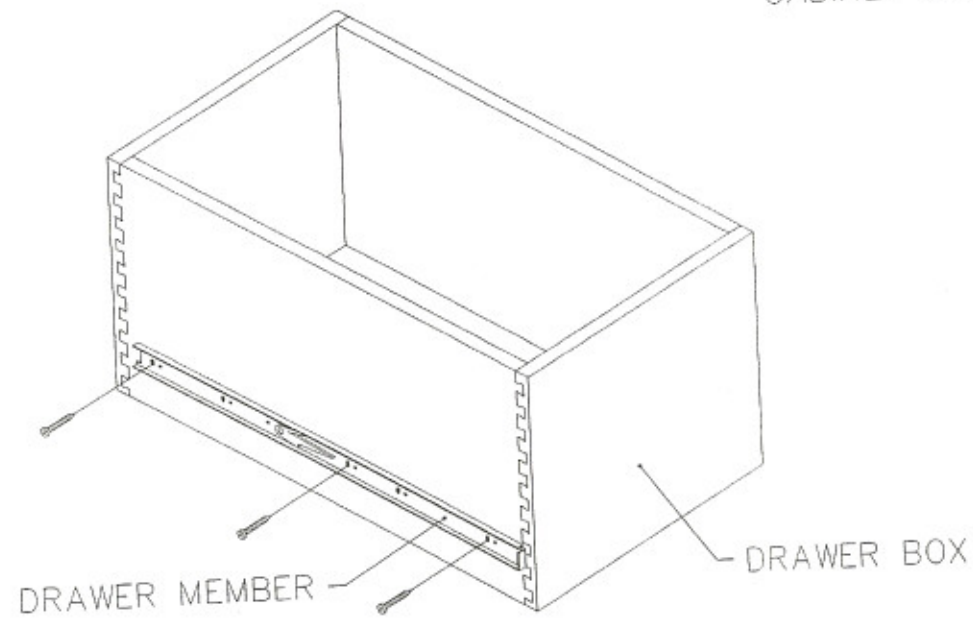



LATERAL FILE 2 DRAWER SLIDE INSTALLATION

1. Mount DRAWER CLEATS to SIDE so that DRAWER MEMBER can be attached with screws. It is recommended that the DRAWER CLEAT be glued to the cabinet SIDE. One set of CLEATS should be mounted tight against inside of FRONT FRAME. Position the second set approximately 14" behind the back of the FRONT FRAME.

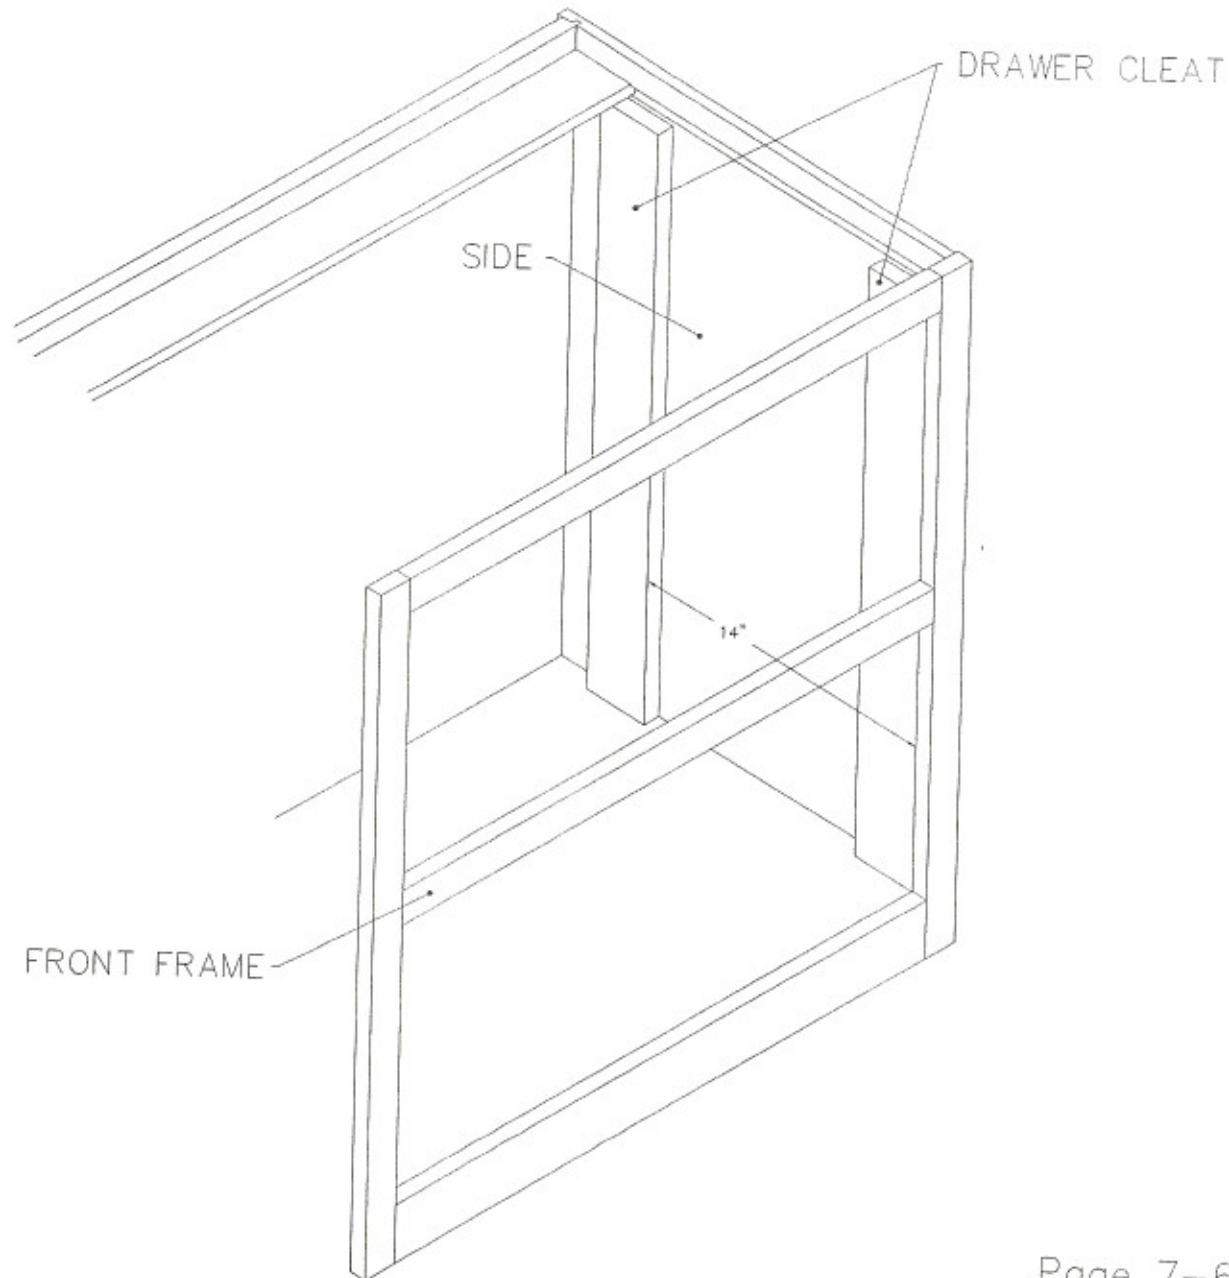

LATERAL FILE 2 DRAWER SLIDE INSTALLATION (cont.)

2. Mount CABINET MEMBER to DRAWER CLEATS. Refer to instructions in slide package for specific placement information.
3. Mount DRAWER MEMBER to DRAWER BOX.
4. Cut CONNECTING ROD to length as specified by slide manufacturer and install between CABINET MEMBERS.
5. For additional installation and adjustment instructions see manufacturer's instructions supplied with slide pack.

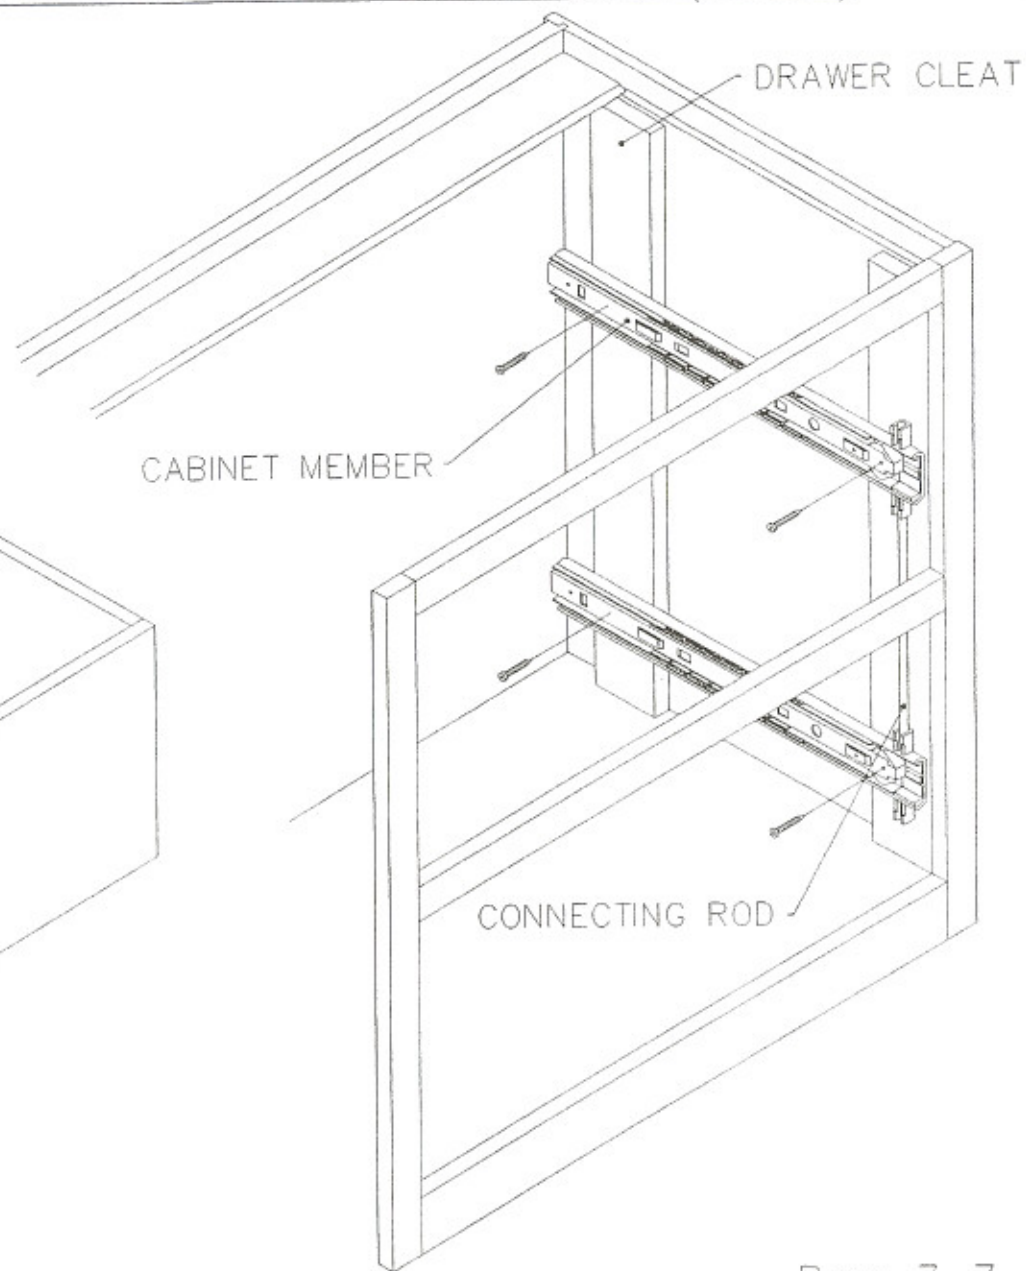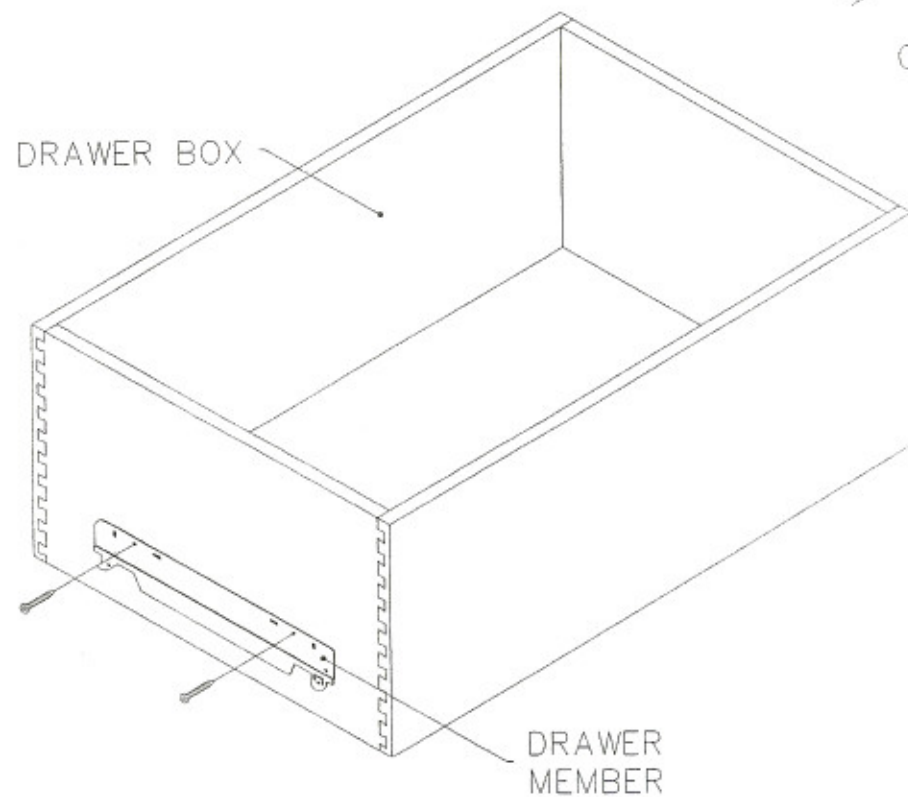

UNDERMOUNT DRAWER SLIDE INSTALLATION – INSET

CABINET ASSEMBLY

1. Mount REAR BOOT on end of CABINET MEMBER. Insert tabs on the back of the REAR BOOT into the pre-drilled holes in the CABINET BACK.

2. Fasten the CABINET MEMBER to the FRONT FRAME using the screws provided.

NOTE: For cabinets with non-overlay drawer fronts, install a 3/4" thick SPACER behind FRONT FRAME and mount CABINET MEMBER to block.

3. Secure REAR BOOT to CABINET BACK using the screws provided.

DRAWER ASSEMBLY

1. The DRAWER MEMBERS should be mounted after the DRAWER BOX is assembled.

NOTE: Back of DRAWER BOX must be notched before attaching DRAWER MEMBER.

2. Place the DRAWER MEMBER onto the bottom of the box and press TEETH firmly into bottom groove. The front of the DRAWER MEMBER should be flush with the front of the DRAWER BOX. Fasten the slide to the DRAWER BOX using 2 screws as shown.

